

AV Instructions for Middle School Classrooms

Video:

Turn the Projector on using the Small Sony Remote (Point at either the front of the project itself or the reflector on the wall), the light on the projector turns green, and it warms up slowly, give it a second to do so. (See Picture)



Videotape:

1. Turn the Bottom Sony A/V Unit on.
2. Set the Function on the A/V Control Center to (See Picture) "Video 1".



3. Press Input button on the Projector Remote until the screen reads "Video".




4. Turn on VCR and insert tape.

DVD:

1. Turn the Bottom Sony A/V Control Center on.
2. Set the Function on the A/V Control Center to (See Picture) “Video 1”.
3. Press Input button on the Projector Remote until the screen reads “Video”.
4. Turn on DVD player and insert disc.

Computer:

1. Connect laptop monitor port to supplied cable, into the port in wall.
2. If sound is desired, plug the cable into the Headphone jack, and into the port in the wall and set the Function of the A/V Control Center to (See Picture) “TV”. (See Diagram below)
3. Press Input button on the Projector Remote until it reads “Video”

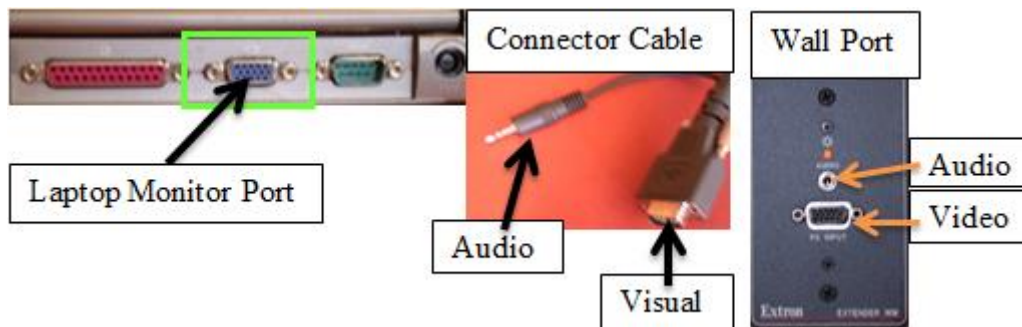

Audio:

Turn the Bottom Sony Unit (A/V Control Center) on.

CD:

1. Check power, insert CD.
2. Set the Function on the A/V Control Center to (See Picture) “DVD”.
3. Set volume to 20 to start.

Tape:

1. Power on, insert tape (Left Deck).
2. Set the Set the Function on the A/V Control Center to (See Picture) “MD / TAPE”.

Power off:

1. Press the power button on the Projector twice to power down the projector.
2. Turn off the Sony A/V Receiver.